 


Amazon Kindle 2 & Kindle DX

Audible User Guide

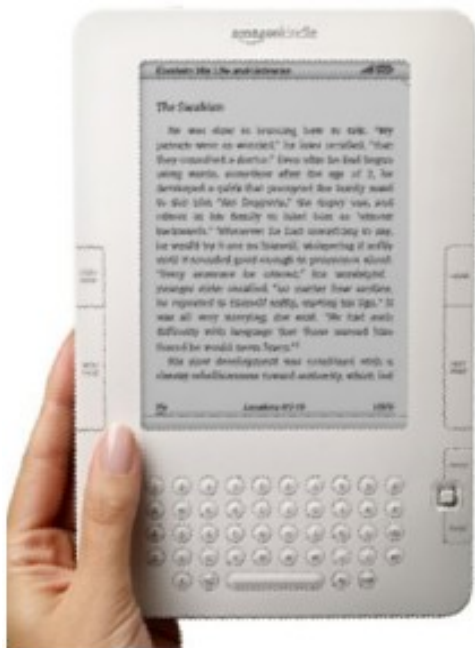

Kindle 2



Kindle DX


System Requirements:

o Windows Operating System(s):	Windows 2000, XP, and Vista	o AudibleManager Version:	5.5.0.3+
o Mac Operating System(s):	Mac OS X +	o Windows Media Player Version:	11


Audible Features:

o Audible Formats Supported:		o Section Navigation:	Yes
o Bookmarking:	No	o Variable Playback Speed:	No

 
Kindle 2 Device Layout:

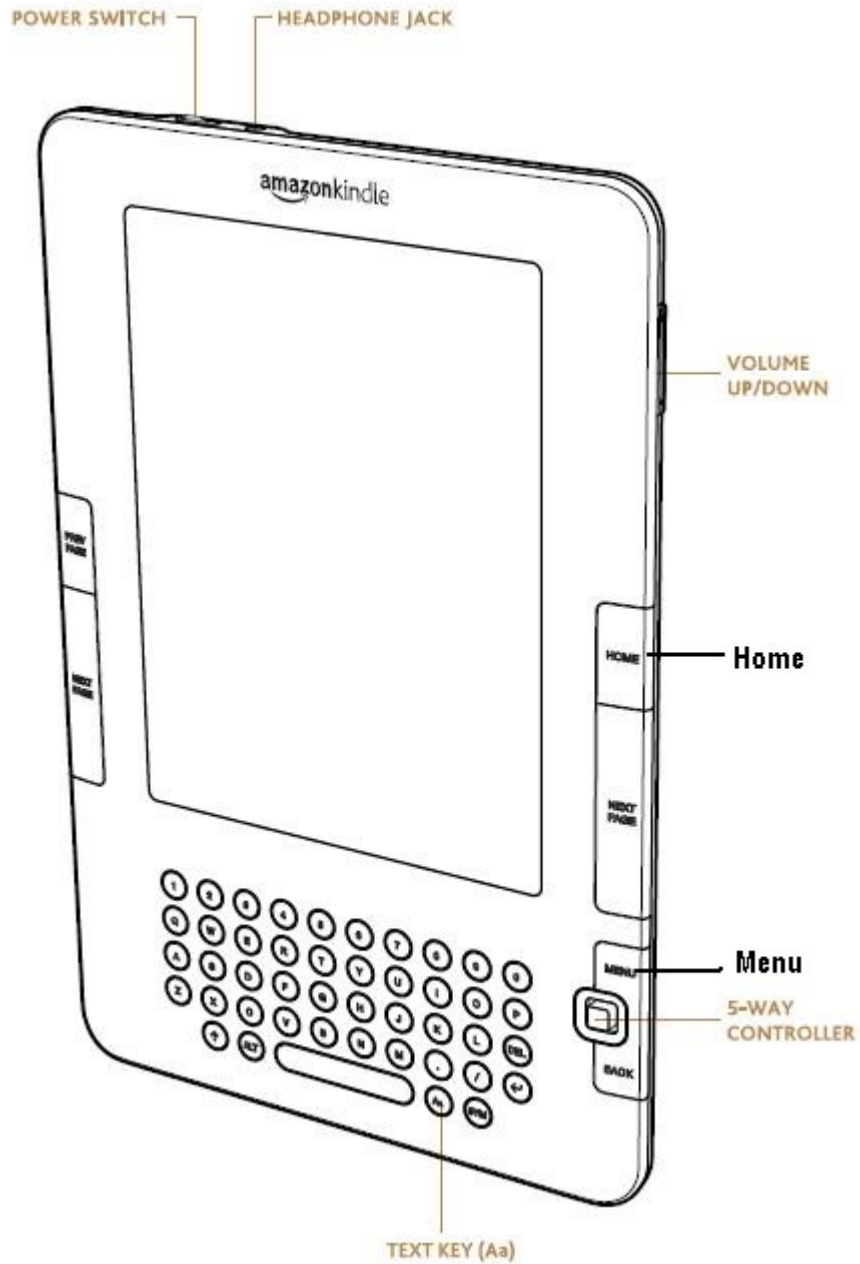


Kindle DX Device Layout:

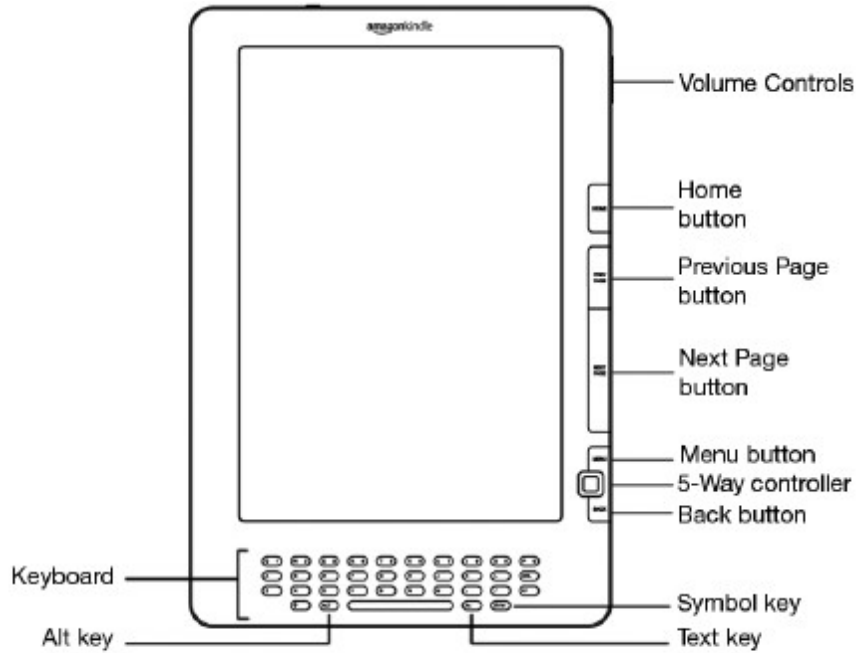 

TOP VIEW

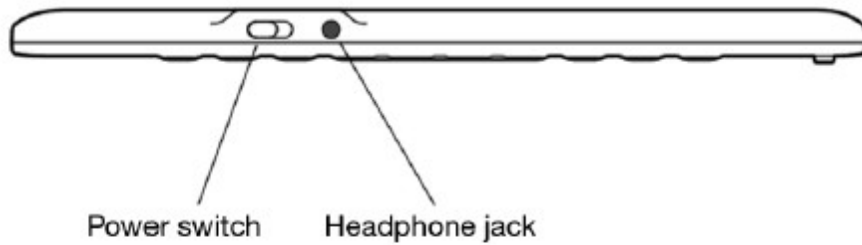 

BOTTOM VIEW

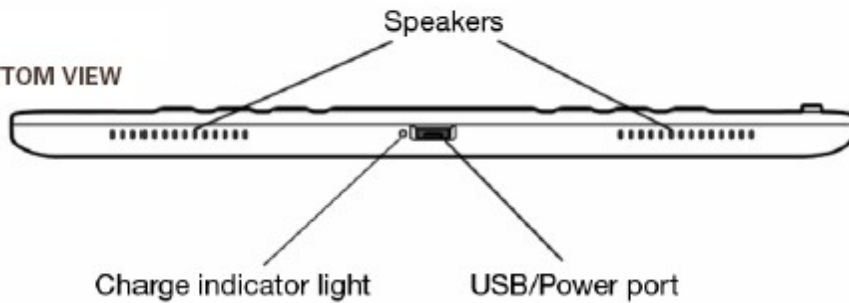 

How To's:

Playback - *How do I locate and play Audible content on my device?*

- Step 1.** Press the **Home** button.
- Step 2.** From the Home screen, using 5-way controller to scroll up or down, highlight the desired Audible title you wish to play, and press the center of 5-way control to select title.
- Step 3.** In the play window, press the center of 5-way control and play will start.

Rewind/Fast-Forward - *How do I rewind or fast-forward an Audible book?*

Rewind

- Step 1.** On the player screen, select the **Rewind** button and press and hold the center of the 5-way control down.

Fast-Forward

- Step 1.** On the player screen, select the **Fast-Forward** button and hold the center of the 5-way control down.

Section Navigation - *How do I navigate through sections within an Audible book?*

- Step 1.** During playback, select **>>|** (for section forward) OR **|<<** (for section back) and press the center of the 5-way control down.

Wireless Activation - *How do I activate my Audible account wirelessly using the Amazon WhisperNet?*

- Step 1.** If you have not yet registered your Kindle with your Amazon account, you must first do so by pressing the **Menu** button, selecting **Settings**, and then **Register**.
- Step 2.** Upon your first attempt to play an Audible title, you will be prompted for your Audible account information in order to complete the activation.