

# Insignia NS-DA & NS-DV Series

## Audible User Guide.



### Requirements & Tech Specs

- **Only** Win XP, with SP 1 or higher
- Windows Media Player 10
- Audible formats: 2,3, and 4
- Up to 20 hours of battery life
- **Only** Win XP, with SP 1 or higher
- Windows Media Player 10
- Audible formats: 2, 3 and 4
- FM tuner and FM recorder

### I. Playing Audible Titles on Your Insignia:

Once your Audible files have been successfully transferred into your device, use one of the following method to locate and playback your Audiobooks.

#### To play Audible files:

1. Press (Menu).
2. Use the scroll wheel to highlight *Audible*, then press (Next) or (Play/Pause).
3. Use the scroll wheel to select the Audible file, then press (Next) or (Play/Pause).
4. Press (Previous) or (Next) to play the previous or next Audible file.

## II. Section Navigation

### Moving between chapter in an Audible audio book

#### To move between chapters in Audible files:

1. Press ^ (Up) while playing an Audible file to turn on the chapter feature.
2. Press ⏮ (Previous) or ⏭ (Next) to move to the previous or next Audible chapter.
3. Press ^ (Up) to turn off the chapter feature.


## Buttons & Functions

### NS-DA



Item	Icon	Function
A	☰	Menu--Opens the on-screen menu for selecting songs and changing settings.
B	⏮	Rewind/Skip Back--Press to restart the current track, and press repeatedly to skip to previous tracks. Press and hold to rewind. In FM radio mode, press to change frequencies.
C	^	Up--Press to scroll up through lists or change radio frequency presets.
D	⏭	Fast Forward/Skip/Next--Press to skip to the next track. Press and hold to fast forward. In menus, press to open the next submenu or setting. In FM radio mode, press to change frequencies.
E	⏻	Power--Press and hold to turn on the player. Press and hold again to turn off.
F	∨	Down--Press to scroll down through lists or change radio frequency presets.
G	▶∥	Play/Pause/Select--Press to play or pause playback. In menus, press to select. In FM radio mode, press and hold to change audio mode.

## NS-DV

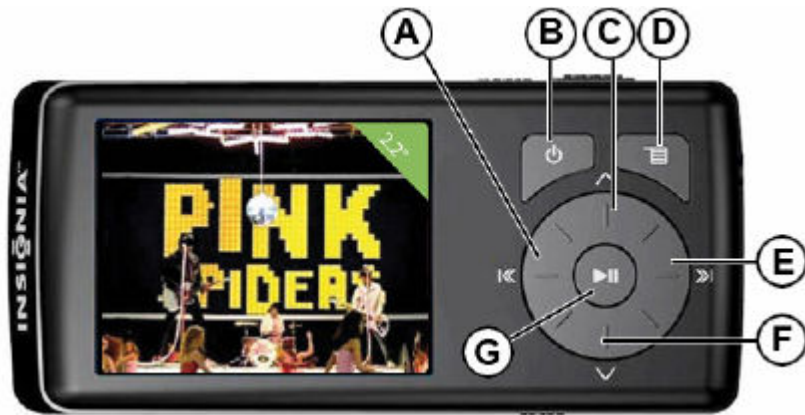

Item	Icon	Function
A	⏮	Rewind/Skip Back/Previous--Press to restart the current track, and press repeatedly to skip to previous tracks. Press and hold to rewind. In FM radio mode, press to change frequencies. In Menu mode, press to go to the previous menu.
B	⏻	Power--Press and hold to turn on the player. Press and hold again to turn off. Press briefly to return the screen to full brightness.
C	⏶	Up--Press to scroll up through lists or change radio frequency presets.
D	☰	Menu--Opens the on-screen menu for selecting songs and changing settings.
E	⏭	Fast Forward/Skip/Next--Press to skip to the next track. Press and hold to fast forward. In menus, press to open the next submenu or setting. In FM radio mode, press to change frequencies.
F	⏵	Down--Press to scroll down through lists or change radio frequency presets.
G	⏸	Play/Pause/Select--Press to play or pause playback. In menus, press to select. In FM radio mode, press to memorize presets or to record.
		Scroll wheel -- Volume in Now Playing mode and Up/Down in Menu mode.

It is important that you read the manual to ensure that you get the most out of your new device. For further guidance with using your new device, please visit [www.insignia-products.com](http://www.insignia-products.com).