

Insignia Pilot Audible User Guide




Requirements & Tech Specs

- **Only** Win XP with SP 2 or Vista
- Windows Media Player 11.
- **Audible Formats:** 2 3 4
- **Capacities Available:** 2GB, 4GB
- **Bookmarking:** Yes
- **Section Navigation:** Yes
- **Variable Playback Speed:** No
- **FM Radio:** Yes
- **Video:** Yes
- **Removable Battery:** No

How To's:

A. **Playback:** How do I locate/play Audible content on the Insignia Pilot?

1. From the **Main Menu** scroll to and select **Audible Books** listed with the Audible "a" icon shown below.

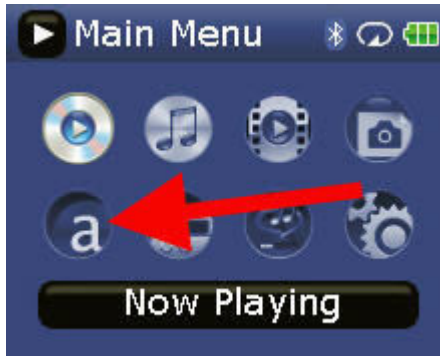

2. On the **Audible Books** page, scroll to and select the title you wish to play and press the select (play/pause) button.

B. **Rewind/Fast-Forward:** How do I rewind/fast-forward through my Audible content on the device?

1. **Rewinding:** While the title is playing, press and hold the **Fast-Forward** button.
2. **Fast-Forwarding:**

C. **Bookmarking:** How do I bookmark on the device?

1. **Setting a bookmark:**

- a. While the title is playing, press the **Rating button** on the top of the device.
- b. Scroll down to **Save BookMark** and press the Play/Pause button.

2. **Going to a bookmark:**

- a. While the title is playing, press the **Rating button** on the top of the device.
- b. Scroll down to **Load BookMark** and press the Play/Pause button.
- c. Scroll down to the desired bookmark and press the Play/Pause button.
- d. Select **Play** from the menu.

3. Removing a bookmark:

- a. While the title is playing, press the **Rating button** on the top of the device
- b. Scroll down to **Load BookMark** and press the Play/Pause button.
- c. Scroll down to the desired bookmark to delete and press the Play/Pause button.
- d. Select **Delete** from the menu.
- e. Confirm the deletion by choosing **Yes** on the delete menu.

D. Section Navigation: How do I use section navigation?

1. While the title is playing, press the **Up** button
2. The screen will then show **Section**
3. Using the **Rewind/Fast-Forward** buttons, you can skip back or ahead through the sections.

Buttons & Functions



Item	Icon	Function
A	^	Up <ul style="list-style-type: none"> Press to go up through menus or change radio frequency presets. Press and hold to increase the volume level when using an armband.
B	☰	Menu <ul style="list-style-type: none"> Press to open the on-screen menu for selecting songs and changing settings. Press to go back to the previous menu setting.
C	▶	Play/Pause/Select/Record <ul style="list-style-type: none"> Press to play or pause playback. In menus, press to select. In FM radio mode, press to memorize presets or to record. Press and hold to start recording.
D	>	Fast Forward/Skip/Next <ul style="list-style-type: none"> Press to skip to the next track. Press and hold to fast forward. In menus, press to open the next submenu or setting. In FM radio mode, press to change frequencies. In Menu mode, press to scroll forwards through the menu headings.
E	∨	Down <ul style="list-style-type: none"> Press to go down through menus or change radio frequency presets. Press and hold to decrease the volume level when using an armband.
F	<	Rewind/Skip Back/Previous <ul style="list-style-type: none"> Press to restart the current track. Press repeatedly to skip to previous tracks. Press and hold to rewind. In FM radio mode, press to change frequencies. In Menu mode, press to scroll backwards through the menu headings.
		Scroll wheel <ul style="list-style-type: none"> Press to adjust the volume in Now Playing mode. Press to move up and down in Menu mode.

Top



Item	Function
A	Rating button <ul style="list-style-type: none"> Press to open the Bookmark and Audio option menus. Move left to remove stars from a rating. Move right to add stars to a rating.
B	Power/HOLD switch <ul style="list-style-type: none"> Slide to the right and hold for five seconds to turn on or turn off the player. Slide to the right and hold for ten seconds to reset the player. Slide to the left to disable all buttons. See "Manually changing the USB mode" on page 28.

