

Microsoft Zune HD


Audible User Guide



System Requirements:

o Windows Operating System(s):	Windows 7, Vista, & XP (Service Pack 2)	o AudibleManager Version:	5 or higher
o Mac Operating System(s):	N/A	o Windows Media Player Version:	N/A

Audible Features:

o Audible Formats Supported:		o Section Navigation:	Yes
o Bookmarking:	No	o Variable Playback Speed:	No

Device Layout:



How To's:

Playback - *How do I locate and play Audible content on my device?*

- Step 1.** From the Zune HD home screen, tap **audiobooks**.
- Step 2.** Tap the title that you would like to play.

Rewind/Fast-Forward - *How do I rewind or fast-forward an Audible book?*

Rewind

- Step 1.** During playback, tap the screen to bring up the media controls.
- Step 2.** Tap and hold the **rewind** button.

Fast-Forward

- Step 1.** During playback, tap the screen to bring up the media controls.
- Step 2.** Tap and hold the **fast-forward** button.

Section Navigation - *How do I navigate through sections within an Audible book?*

- Step 1.** During playback, tap the screen to bring up the media controls.
- Step 2.** Tap the **rewind** button once to go back to the previous section; tap the **fast-forward** button once to go to the next section.