Microsoft Zune

Audible User Guide



System Requirements:


 Windows Operating System(s): 	Windows XP SP2 + Vista	 AudibleManager Version: 	5.5 or above
 Mac Operating System(s): 	N/A	\circ Windows Media Player Version:	N/A
• Firmware Version:	3.0 or above	 Zune Software Program: 	2.5 or above

* Please note, for information on updating your Zune to support Audible, please visit: <u>FAQ 3800 - Using Microsoft Zune with Audible</u>

Audible Features:

$_{\odot}$ Audible Formats Supported:	40	 Section Navigation: 	Yes
 Bookmarking: 	N/A	 Variable Playback Speed: 	N/A

Device Layout:

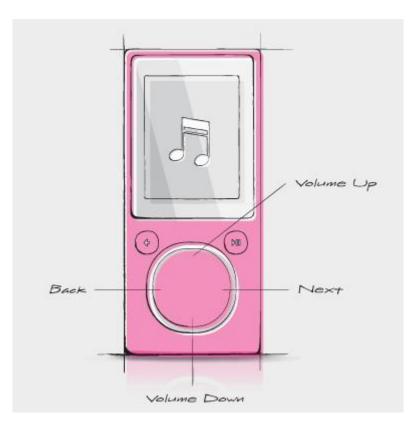

How To's:

<u>Playback</u> - How do I locate and play Audible content on my device?

- **Step 1.** From the main window scroll to and select **audiobooks**.
- **Step 2.** Scroll to and select the title you want to play.
- **Step 3.** Select play to begin playing the selected title.

Rewind/Fast-Forward - How do I rewind or fast-forward an Audible book?

Rewind

Step 1. Press and hold the pad to the left.

Fast-Forward

Step 1. Press and hold the pad to the right.

Section Navigation - How do I navigate through sections within an Audible book?

- **Step 1.** During playback press the pad to the left once to return to the previous section.
- **Step 2.** During playback press the pad to the right once to skip to the next section.