

SanDisk Sansa Fuze


Audible User Guide



System Requirements:

o Windows Operating System(s):	Windows XP & Vista	o AudibleManager Version:	5 and above
o Mac Operating System(s):	N/A	o Windows Media Player Version:	11

Audible Features:

o Audible Formats Supported:	 (Enhanced Audio support with firmware versions 2.01.06 and above only)	o Section Navigation:	Yes
o Bookmarking:	No	o Variable Playback Speed:	Yes

Device Layout:



1	Play/Pause	Toggles between Play/Pause
2	Left/Previous/Rewind	<ul style="list-style-type: none"> • Navigates back a screen • On Play Only – press and hold for Rewind
3	microSD Card Slot	Insert microSD/microSDHC card here
4	MIC	Built-in microphone (internal)
5	Thumbwheel	<ul style="list-style-type: none"> • List view – Navigates Up and Down • Volume Control • Brightness Control • Rating
6	Sansa Dock Connector	Connect Sansa cable here
7	Submenu/Options	Quick Access to contextual Option List
8	Headphone Jack	Insert headphone here
9	Select Button	<ul style="list-style-type: none"> • Press to make a selection • Press and Hold to add to Music or Photo Go List
10	Right/Forward	<ul style="list-style-type: none"> • Navigates forward a screen • Press for next track • On Play Only – press and hold for Fast Forward
11	Home/Menu	<ul style="list-style-type: none"> • Return to the Main Menu • Return back to the play screen
12	Display Screen	Displays the status of the Sansa player
13	Power Switch	<ul style="list-style-type: none"> • Slide up to turn on the player • Slide up and hold for 2 seconds to turn off the player • Slide up and hold for 10 seconds to reset your player
14	Hold/Lock Indicator	Factory sets to locked position (shows orange color). Slide to center position for controls. When locked, all controls are disabled to prevent accidental activation of controls.

How To's:

Playback - *How do I locate and play Audible content on my device?*

- Step 1.** From the **Main Menu**, scroll to, and select **Music**.
- Step 2.** Scroll to and select **Audiobooks**.
- Step 3.** From the list of **Audiobooks**, scroll to the desired title, and press the **Select** button to begin playing the title.

Rewind/Fast-Forward - *How do I rewind or fast-forward an Audible book?*

Rewind

- Step 1.** While the title is playing, press and hold the **Rewind** button.

Fast-Forward

- Step 1.** While the title is playing, press and hold the **Forward** button.

Section Navigation - *How do I navigate through sections within an Audible book?*

- Step 1.** While the title is playing, press the **Down/Submenu** button.
- Step 2.** Scroll to **Ch. Mode** and press the **Center** button.
- Step 3.** Use the scroll wheel to toggle **Ch. Mode** on and press the **Center** button to make the change.
- Step 4.** Use the **Rewind** and **Forward** buttons to navigate by sections.

Change Playback Speed - *How do I change the playback speed of Audible content?*

- Step 1.** While the title is playing, press the **Down/Submenu** button.
- Step 2.** Scroll to **Speed** and press the **Center** button.
- Step 3.** Use the scroll wheel to toggle between **Slow**, **Normal**, or **Fast**, and press the **Center** button to make the change.