# Sandisk Sansa Digital Audio Player

## Audible User Guide
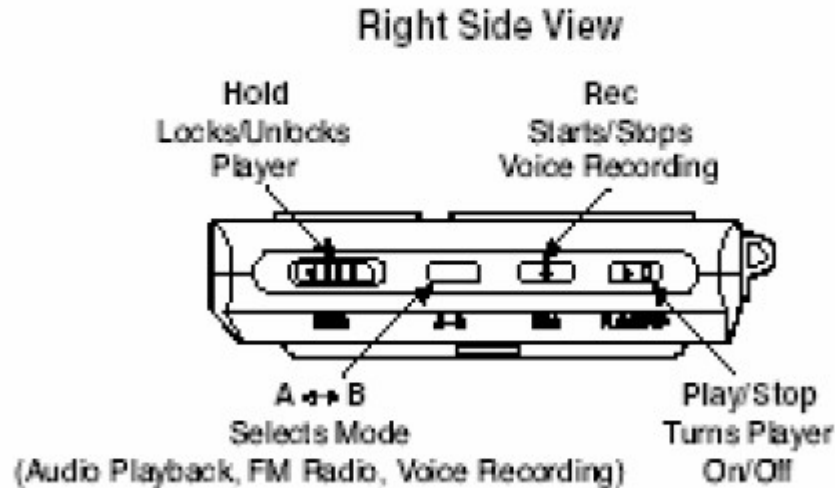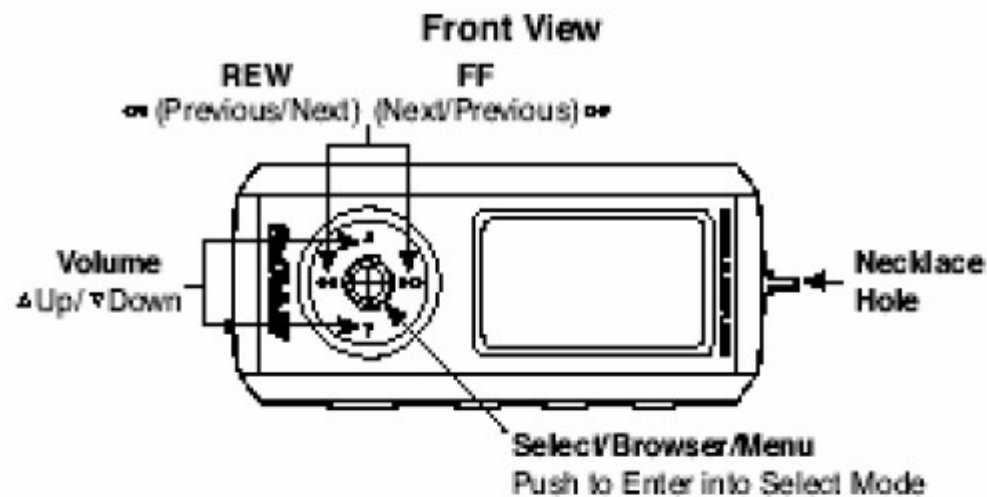


## System Requirements:

| | | | | | |
|---|---|---|---|---|---|
| o | Windows Operating System(s): | Windows 2000 & XP | o | AudibleManager Version: | 5 |
| o | Mac Operating System(s): | No | o | Windows Media Player Version: | 11 |

## Audible Features:

| | | | | | |
|---|---|---|---|---|---|
| o | Audible Formats Supported: | 2 3 4 | o | Section Navigation: | Yes |
| o | Bookmarking: | No | o | Variable Playback Speed: | No |

# Device Layout:

## Front View

REW           FF
◄◄ (Previous/Next)    (Next/Previous) ►►

Volume
△Up/ ▽Down

Necklace Hole

Select/Browser/Menu
Push to Enter into Select Mode

## Right Side View

Hold
Locks/Unlocks
Player

Rec
Starts/Stops
Voice Recording

A ◄►► B
Selects Mode
(Audio Playback, FM Radio, Voice Recording)

Play/Stop
Turns Player
On/Off

## Top View

Microphone    Earphone

## Bottom View

USB Port

# How To's:

**Playback** - *How do I locate and play Audible content on my device?*

**Step 1.**    Press the **Select/Browser/Menu** button to access folders.
**Step 2.**    Select **Audible** folder.
**Step 3.**    Select the title you wish to play and press the **Select/Browser/Menu** button.

**Rewind/Fast-Forward** - *How do I rewind or fast-forward an Audible book?*

### Rewind

**Step 1.**    While the title is playing, press and hold the **Rewind** button.

### Fast-Forward

**Step 1.**    While the title is playing, press and hold the **Fast-Forward** button.

## Section Navigation - *How do I navigate through sections within an Audible book?*

**Step 1.**    While the title is playing, press the **Rec** button to access CH (Chapter) mode.
**Step 2.**    Single press >> (Fast Forward) button to go to next section, single press << (Rewind) button to go to previous section.