Creative Zen Mozaic

Audible User Guide

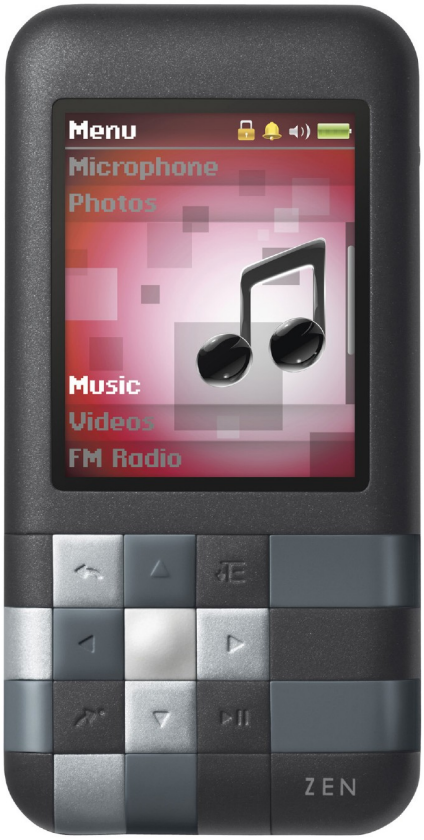

System Requirements:

○ Windows Operating System(s):	Windows XP (SP2 or Higher) &Vista	○ AudibleManager Version:	5.1 or Above
○ Mac Operating System(s):	N/A	○ Windows Media Player Version:	11

Audible Features:

○ Audible Formats Supported:	4	○ Section Navigation:	Yes
○ Bookmarking:	Yes	○ Variable Playback Speed:	No

Device Layout:

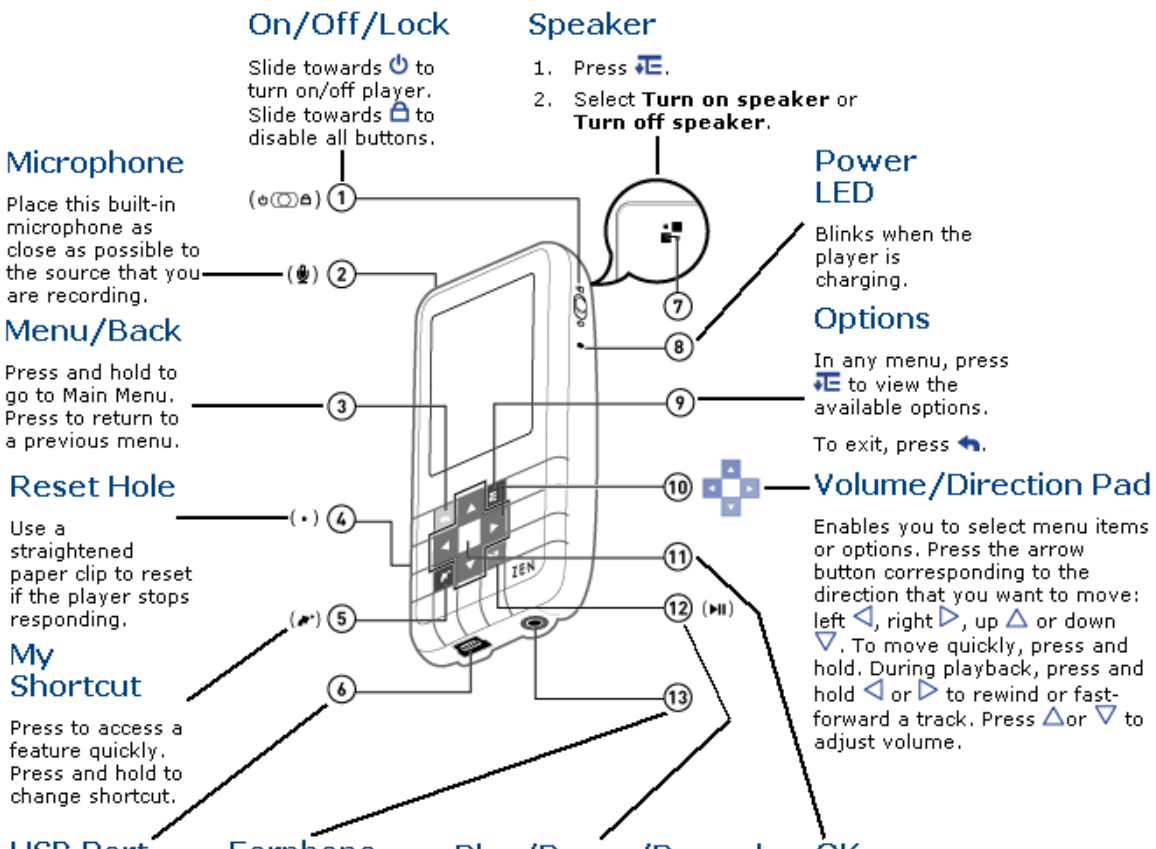

Note

- The speaker is available on selected models only.
- To receive FM radio signals, connect your earphones even when listening to the radio through the speaker.

How To's:

Playback - *How do I locate and play Audible content on my device?*

Step 1. Press and hold to enter the **main menu**.
Step 2. Select **Music**, then **Genres**.
Step 3. Select **Audio book** or **Spoken Word.**
Step 4. Select the title you want, and press .

Rewind/Fast-Forward - *How do I rewind or fast-forward an Audible book?*

Rewind

Step 1. While title is playing press and hold .

Fast-Forward

Step 1. While title is playing press and hold .

Section Navigation - *How do I navigate through sections within an Audible book?*

Step 1. Press to go to the previous section
Step 2. Press to skip to the next section.

Bookmarking - *How do I use bookmarking for Audible content?*

Setting a Bookmark

Step 1. Play the title that you want to bookmark.
Step 2. In the **Now Playing** view, while the track is playing, press and select **Set Bookmark**.
Step 3. Select a bookmark number.

Accessing a Bookmark

Step 1. On the main menu, select **Music** → **Bookmarks**.
Step 2. Select the bookmark that you want.

Removing a Bookmark

Step 1. If all 10 bookmark numbers have been assigned, clear an existing bookmark. In the main menu, select **Music** → **Bookmarks**. Press and select **Clear Bookmark**.